



**Grand Rental Station**  
570 Rudder Rd  
Fenton, MO 63026  
P: 636-343-7278  
info@grandrental-stl.com  
www.grandrental-stl.com



# Cotton Candy Machine Instructions

## Operating Info:

**Parts:** 1 - Bubble, 1 - Floss Pan, 1 - Mesh Pan Liner, 5 - Clips for Mesh Net and 1 - Instructions

**Power Requirements:** DO NOT USE EXTENSION CORDS! Grounded 15 Amp; 120V AC Circuit.

### Switches:

**Master/Power Switch** - Turns machine on/off.

**Candy Switch** - Turns on/off the Heating Element.

## Operating Instructions:

- 1)** Plug machine into its own standard 15amp outlet. (Machine will need 1 - 15amp circuit)
- 2) Do not use an extension cord!** Unless one(1) is provided with the machine.
- 3)** Lower the handle down and place the Floss Pan on top of the Machine. Wrap the mesh netting around the inside of the floss pan and use the 5 - clips to hold it in place against the pan.
- 4)** Pour floss sugar in the Floss Head(center opening) of the cotton candy machine.
- 5)** Check to make sure the leather strips are sticking straight out.
- 6) Safety First!** Place the bubble on top of the floss pan to avoid possible injury.
- 7)** Completely turn off the machine everytime you add additional Floss Sugar or remove built up cotton candy around the Floss Head.
- 10)** Turn off the **Candy switch** when you are finished and wait for the machine to complete the cool down process (Note: The cool down light will turn on during this process) and shut off on its own.
- 11)** Return handle to the upright position for transportation and carrying.
- 12)** Empty out extra Floss sugar from the Floss Head into a bowl or trash can prior to returning the machine.
- 13) Do Not attempt to submerge or spray water on or near any part of this machine!**

Consult Grand Rental Station for additional equipment and accessories for your special event.

### UNDERSTAND YOUR RENTAL CONTRACT. KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

These guidelines and tips are common-sense suggestions designed to promote Popcorn Machine efficiency and safety. Compiled from literature of leading experts in the field, they are believed to be reliable, and are offered as suggestions and illustrations to deal principally with common practices and conditions encountered in the use of Popcorn Machines. The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplant or replace other additional precautionary measures to cover usual or unusual conditions or situations where common-sense might otherwise dictate. Accordingly, the Grand Rental Station disclaims all liability for, and make no warranty or guarantee of the accuracy or applicability of this information in any situation.