



Grand Rental Station
570 Rudder Rd
Fenton, MO 63026
P: 636-343-7278
info@grandrental-stl.com
www.grandrental-stl.com



Hot Dog Roller Grill Instructions

Operating Info:

Parts: 1 - Removable drip tray

Power Requirements:

DO NOT USE EXTENSION CORDS! Grounded 15 Amp; 120V AC Circuit.

Capacity: Aprox. 25-35 standard hot dogs depending on the unit.
Approximate cooking time is around 5+/- minutes.

Switches: Power Switch (Front and Rear) -Turns on heat to Cooking Surface

Heat Control Knob -Each knob controls the heat for a set of 5 rollers.

Operating Instructions:

- 1) Place the Hot Dog Roller Grill on a level surface.
- 2) Plug machine into its own standard 15amp outlet. (Machine will need 1 - 15amp circuit)
- 3) **Do not use an extension cord!** Other than what may be provided.
- 4) Place hot dogs on rollers.
- 5) Turn on Power switch, Adjust heat control knob to the desired setting.
The unit is designed with 2 separate cooking zones. one knob will control the front half (set of 5 rollers) and the other knob will control the rear half (set of 5 rollers) of the cooking surface.
- 6) For Low heat, set control(s) to LOW using one or both sets of rollers. For High heat, set controls to MEDIUM or HIGH using both sets of rollers
- 7) Turn off all switches when you are finished.

Cleaning Instructions: Do not use steel wool to clean!

- 1) Unplug the unit
- 2) Remove the remaining hot dogs
- 3) Remove and wash drip tray with mild detergent and warm water and reinsert it under the rollers
- 4) Grand Rental Station will thoroughly clean the machine once it is returned.

Consult Grand Rental Station for additional equipment and accessories for your special event.

UNDERSTAND YOUR RENTAL CONTRACT. KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

These guidelines and tips are common-sense suggestions designed to promote Popcorn Machine efficiency and safety. Compiled from literature of leading experts in the field, they are believed to be reliable, and are offered as suggestions and illustrations to deal principally with common practices and conditions encountered in the use of Popcorn Machines. The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplant or replace other additional precautionary measures to cover usual or unusual conditions or situations where common-sense might otherwise dictate. Accordingly, the Grand Rental Station disclaims all liability for, and make no warranty or guarantee of the accuracy or applicability of this information in any situation.